

### **REP-232-7P**

### Industrial RS-232 Isolated 7-Wire Repeater Pair

#### Datasheet Revision 1.2

# SERIALCOMM.COM

#### **GENERAL FEATURES:**

- Plug-and-Play (hot-pluggable)
- 2500V optical isolation
- Data direction auto-turnaround no flow control necessary
- Port powered no external power needed
- Built-in surge and static protection
- 5-year replacement manufacturer's warranty
- CE. FCC. RoHS and REACH certified



### **DESCRIPTION:**

The SerialComm REP-232-7P is a pair of industrial grade bi-directional port powered 2500V opto-isolated RS-232 port extenders. The converter pair can extend the data distance of two standard full duplex RS-232 ports up to 4000 ft(1.2km). The converter pair extends the distance of not only the data lines but also the RTS, CTS, DTR and DSR handshake lines. A built-in data direction auto-turnaround feature automatically enables the wire driver when data is present from the RS-232 port, eliminating the need for software drivers and making the device fully plug-and-play. The REP-232-7P has a DB9 female connector on the RS-232 serial port, and DB9 male connector on the wire port. A separate terminal block is included with each converter for maximum flexibility. The terminal block plugs into the wire port, providing screw-lug wire terminations for the port. The unit is enclosed in a rugged ABS housing and is powered from the RS-232 data lines; no external power is required.


## **CERTIFICATIONS:**







# **APPLICATIONS:**

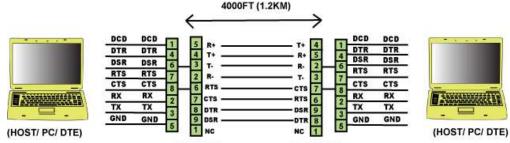

REP-232-7P **REP-232-7P** FIGURE 1: EXTENDING RS-232 DATA AND HANDSHAKE DISTANCE

## **PINOUT CONFIGURATION:**

#### RS-232 SIDE - DB9 FEMALE

SIGNAL	DCD	DTR	DSR	RTS	CTS	TX	RX	GND
PIN#	1	4	6	7	8	2	3	5
FUNCTION	DCD	DTR	DSR	RTS	CTS	TX	RX	GND



#### WIRE SIDE - DB9 MALE OR TERMINAL BLOCK


SIGNAL	NC	R-	T-	T+	R+	RS	CS	DTR	DSR
PIN#	1	2	3	4	5	6	7	8	9
FUNCT.	NC	R-	T-	T+	R+	RTS	CTS	DTR	DSR



# SPECIFICATIONS:

SPECIFICATIONS:				
	COMMUNICATION			
STANDARDS:	DARDS: EIA/TIA RS-232C Standard			
BAUD RATES:	From 300 bps to 115,200 bps			
CONNECTOR TYPES:	RS-232 Side: DB9 Female and Wire Side: either DB9			
	Male or 8-way Terminal Block			
DISTANCE:	RS-232 Side: 16 ft (5m) and Wire Side: up to 4000 ft			
	(1.2km)			
	ELECTRICAL			
POWER SOURCE:	Port Powered From RS-232 Data Lines			
OPTICAL ISOLATION:	2500V (2500Vrms 1 min, AC)			
CURRENT CONSUMPTION:	Less Than 10 mA			
STATIC PROTECTION:	15KV Electric Static Discharge (ESD) Protection			
SURGE PROTECTION:	600W Surge Protection			
	MECHANICAL			
HOUSING:	Rugged ABS			
WEIGHT:	With Terminal Block: 1.4oz (39.7 grams)			
	Without Terminal Block: 0.8oz (24 grams)			
DIMENSIONS:	With Terminal Block: 3.93" X 2.12" X 0.82"			
	(99.8 mm X 53.7 mm X 20.7 mm)			
	Without Terminal Block: 2.47" X 1.33" X 0.70"			
	(62.8 mm X 33.8 mm X 17.8 mm)			
	ENVIRONMENTAL			
OPERATING TEMP.:	-40° F to 185° F (-40°C to 85° C)			
STORAGE TEMP:	-40° F to 185° F (-40°C to 85° C)			
OPERATING HUMIDITY:	5% To 95% - No Condensation			
	QUALITY			
PRODUCT SAFETY:	CE, FCC, RoHS and REACH Third-party Certified			
QUALITY MANAGEMENT	Manufactured and Distributed to ISO 9001:2015 QMS			
MEAN TIME BEFORE FAILURE:	306,066 Hours			
RELIABILITY:	Low Failure Rate – 99+% Reliability Since Inception			
WARRANTY:	5 Year Replacement Warranty			

## **TERMINAL BLOCK:**

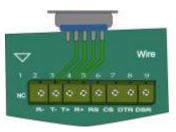

# TROUBLESHOOTING INSTRUCTIONS:

Using one REP-232-7P unit:

- 1. Check that all connections comply with the connection diagrams.
- 2. Perform a loop back test on one unit:
  - a) Connect the T+ to R+, T- to R-, CS to RS and DTR to DSR on the wire port.
  - b) Connect the RS-232 port to the PC RS-232 port.
  - c) Running a hyper terminal program on the PC, send ASCII characters to the REP-232-7P converter from one PC port, and check that the characters are received at the same PC port. This tests that the transmit and receive functions of the REP-232-37 unit is working properly.

### Using two REP-232-7P units:

- 1. Check that all connections comply with the connection diagrams.
- 2. Perform a loop back test on two units:
  - a) Connect the two wire ports per application diagram.
  - b) Connect the two RS-232 ports to two PC RS-232 ports.
  - c) Running hyper terminal programs on both PCs, send ASCII characters to the REP-232-7P converter from one PC port, and check that the characters are received at the 2<sup>nd</sup> PC port. Repeat the test in the opposite direction. This tests that the transmit and receive functions of both REP-232-7P units are working properly.